


Hubbell Industrial Controls, Inc.



EUCLID[™] PBP PENDANT PUSHBUTTON STATIONS ASSEMBLY AND PARTS INFORMATION


- Step #1 Position hanger bracket (Item 1) as required and tighten locking nut 1/3 turn past finger tight.
- Step #2
 Pilot light assembly (Item 2) if used -- push out plug (P/N 28338) from rear. Insert light assembly. Insert pilot light legend plate. Install locking ring.
- Step #3 *Install button assembly (not Pictorially shown). <u>Align keying tabs and holes and press</u> push button assembly into terminal boards. Tighten hold down screws. (Not used on MS2 & MS5). AVO<u>ID</u> <u>OVERTIGTENING</u>
- Step #4 *Install terminal board with button assembly working from top to bottom. Use 8-32 x 1/2" (P/N 47661-098) "sems" screws (Item 4) where single thickness terminal board is fastened. Observe "Top" marking on each board. AVOID OVERTIGHTENING
- Step #5 *Use 8-32 x 5/8" (P/N 47661-100) "sems" screws (Item 5) where two terminal boards overlap. AV<u>OID</u> <u>OVERTIGHTENING</u>
- Step #6 Use 8-32 x 1/2" (P/N 47243-059) pan head screws (Item 6) to install button guards and back cover. <u>CAUTION: DO NOT OVERTIGHTEN THESE</u> SCREWS. Recommended torque is 10 in. lbs. To 12 in. lbs. Maximum. A slight rubber bulging is allowed.

* Where direct wired push buttons are used, Steps #3, #4, & #5 do not apply.

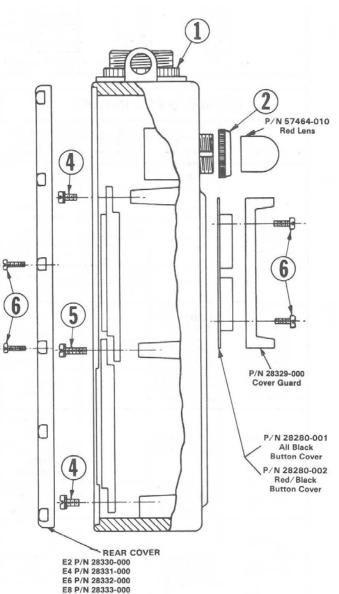

PILOT LIGHTS							
DESCRIPTION	CATALOG NUMBER	LAMP PART NO.	DESCRIPTION	CATALOG NUMBER	LAMP PART NO.		
Pilot Light 120v 60 Hz AC Pilot Light 240v 60 Hz AC	PL1 PL2	57465-015 57465-015	Pilot Light 120V DC Pilot Light 240v DC	PL3 PL4	57465-043 57465-007		

Spec Tech Industrial 203 Vest Ave. Valley Park, MO 63088 Phone: 888 SPECTECH Email: sales@spectechind.com www.spectechind.com

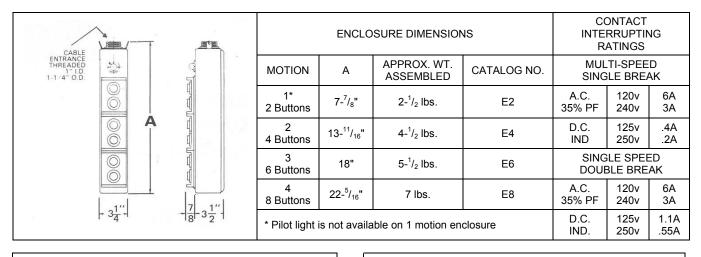

SINGLE SPEED INSERT							
	DESCR	RIPTION DIRECT	CAT.	TYPICAL APPLI-			
SYMBOL	PLUG-IN*	WIRED**	NO.	CATIONS			
2 2 0 5 5 0 6 0 0	MOMENTARY N.O.		PG1	Crane control: trolley, bridge			
	-	MOMENTARY N.O.	DW1	& hoist, etc.			
(Rear View)	-	MAINTAINED	DWS	Start-Stop functions			
(Rear View)	MOMENTARY N.O. & N.C.		PG2	Interlocking, crane control			
	MAINTAINED N.O. & N.C.	-	PG3	Auxiliary functions			
	MAINTAINED MOMENTARY LIFT/DROP	-	PG4 †	Magnet control			
(Rear View)	MOMENTARY MAINTAINED		PG5 †	Used as a toggle switch and for start- stop functions			
	MOMEMTARY START-STOP RESET-STOP	-	PG6•	Start-stop on- off functions			
(Rear View)	MOMENTARY STOP-START STOP-RESET		PG7•	Stop-start off- on functions			

† PG4 and PG5 inserts have one button maintained and one button momentary.
* Terminal Base Cat. TB2 required for each plug-in insert PG1, PG2, PG3, PG4, PG5, PG6, PG7 and MS2. Terminal Base TB5 required for MS5 insert.

**Terminal Base not required with direct wired unit. • "Power On-Off" buttons recommended to comply with provisions of NEMA ICS 3-442.15

MULTI-SPEED INSERT						
	DESCRIPTION		TYPICAL			
SYMBOL	PLUG-IN*	CAT. NO.	APPLI- CATION			
	USED TO A MAXIMUM OF THREE SPEED POINTS	MS2	For multi- speed func- tions			
54321 12345 (3A) (3A) (4A) (3A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (4A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A) (1A)	USED TO A MAXIMUM OF FIVE SPEED POINTS	MS5	For multi- speed func- tions			



Hubbell Industrial Controls, Inc. A subsidiary of Hubbell Incorporated 4301 Cheyenne Dr., Archdale, NC. 27262 Telephone (336) 434-2800 • FAX (336) 434-2803 http://www.hubbell-icd.com Sales@hubbell-icd.com